

8. Remove Fuel Tank Hold Down Strap
  - a. Remove front hold down strap nut
  - b. Loosen rear hold down strap nut using 12" Long extension and 7/16" deep socket.
  - c. Pry strap off of front stud and bend strap up out of way.

