

14. Remove Passenger Air Duct Louvers

- a. Flip open directional louver vanes.
- b. Insert two fingers into top of louver and pull on outer tube to remove  
(DO NOT PULL ON DIRECTIONAL LOUVER VANES TO REMOVE.  
PULLING ON THESE MAY CAUSE DAMAGE TO THE LOUVER)



15. Remove Control Panel Bolts and Pull Out of Body

This will help to give clearance to lift the body in the next stage.

