


6. Remove Hose Clamps From Fuel Fill Neck
(Located above fuel tank behind passenger backrest)

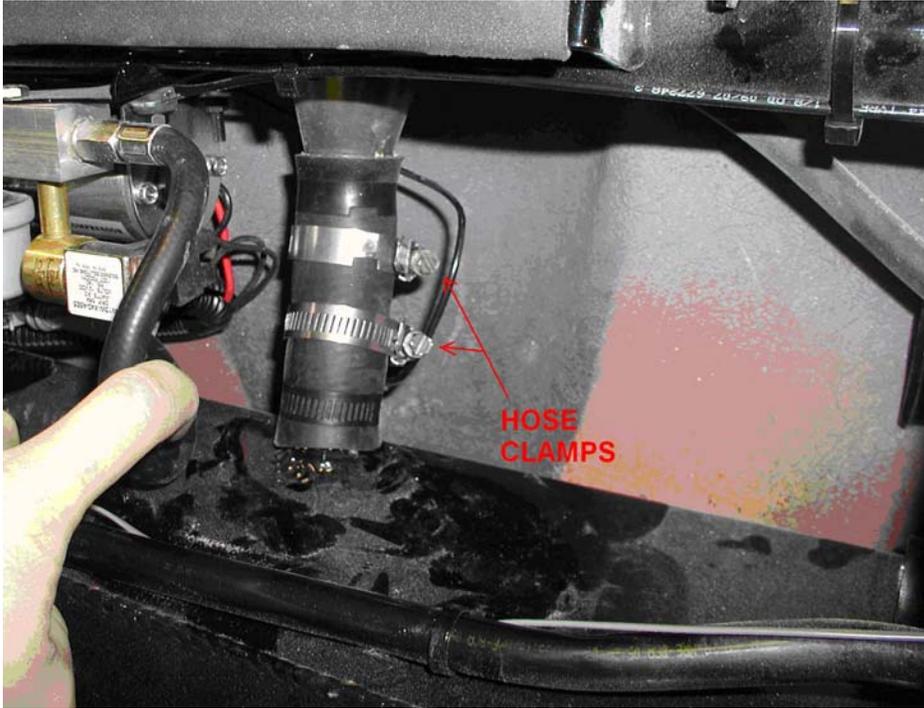

7. Remove Air Compressor and Junction Block from Frame
 - a. Unbolt Junction Block
 - b. Unbolt Air Compressor
 - c. Use Zip-Tie to lift and tie out of way of tank as shown

