

Table of Contents

Introduction	2
CONGRATULATIONS	2
CALIFORNIA Proposition 65 Warning.....	2
SAFETY AND ENVIRONMENT PROTECTION	3
Protecting the environment	3
BREAKING-IN YOUR VEHICLE	3
SPECIAL NOTICES.....	4
New Vehicle Limited Warranty	4
Service Data Recording	4
Cell phone use	5
 Instrument Cluster	6
WARNING LIGHTS AND CHIMES	6
Check engine	6
Check fuel cap	6
Brake system warning light	7
Charging system	7
Engine oil pressure	7
Engine coolant	7
Fog lamps	8
Low fuel.	8
Anti-theft system	8
Speed control.....	8
Turn signal.	8
High beams.....	8
GAUGES	9
Speedometer.	9
Engine coolant temperature gauge	9
Trip odometer.....	10
Tachometer	10
Fuel gauge.....	10
Entertainment Systems	11
AUDIO SYSTEMS	11
Climate Controls.....	12
AIR CONDITIONING / HEAT	12

Table of Contents

Lights	14
HEADLAMP CONTROL	14
FOGLAMP CONTROL	14
HIGH BEAMS	14
FLASH TO PASS	15
TURN SIGNAL CONTROL	15
 Driver Controls	16
TILT STEERING WHEEL	16
CENTER CONSOLE	16
SETTING SPEED CONTROL	17
DISENGAGING SPEED CONTROL	18
RESUMING A SET SPEED	18
INCREASING SPEED USING SPEED CONTROL	18
DECREASING SPEED USING SPEED CONTROL	19
TURNING OFF SPEED CONTROL	19
ADJUSTABLE BRAKE AND GAS PEDALS	19
ADJUSTABLE AIR BAG SUSPENSION	21
 Locks and Security	23
SECURILOCK™ PASSIVE ANTI-THEFT SYSTEM	23
Anti-theft indicator	23
Replacement keys	24
Programming spare keys	24
 Driving	27
STARTING	27
Positions of the ignition	27
Preparing to start your vehicle	27
Important safety precautions	28
Starting the engine	29
Guarding against exhaust fumes	30
BRAKES	30
Parking brake	31
Driving with the 5-spd automatic transmission	32
P (Park)	32
R (Reverse)	33
N (Neutral)	33

Table of Contents

D (Drive)	33
2 (Second)	33
1 (First)	33
Forced downshifts	33
Removing the key	34
Basic operating principles	34
Emergency maneuvers	35
Maintenance and Modifications	35
Roadside Emergencies	37
HAZARD FLASHER	37
FUEL PUMP SHUT-OFF SWITCH	37
FUSES AND RELAYS	38
Fuses	38
Standard fuse amperage rating and color	39
Driver's seat fuse panel	39
Power distribution box	42
CHANGING THE TIRES	46
Option 1	46
Option 2	46
REMOVING YOUR REAR WHEELS	47
REMOVING YOUR FRONT WHEEL	49
INSTALL YOUR FRONT WHEEL	51
WRECKER TOWING	52
JUMP STARTING YOUR VEHICLE	52
Connecting the jumper cables	52
Jump starting	53
Maintenance and Specifications	54
SERVICE RECOMMENDATIONS	54
Working with the engine off	54
Working with the engine on	54
OPENING THE HOOD	55
REMOVING THE SEATS	56
REPLACING THE SEATS	56
ENGINE OIL	57
Checking the engine oil	57
Adding engine oil	59

Table of Contents

Engine Oil Recommendations	59
BATTERY	61
ENGINE COOLANT	63
Checking engine coolant	63
Adding engine coolant	65
Recycled engine coolant	68
Coolant refill capacity	68
Severe climates	68
FUEL FILTER	70
Refueling	73
Fuel Filler Cap	74
Choosing the right fuel	75
Cleaner air	75
Octane recommendations	76
Fuel quality	76
Running out of fuel	76
ESSENTIALS OF GOOD FUEL ECONOMY	77
Measuring techniques	77
Filling the tank	77
Calculating fuel economy	78
Driving style	79
Habits	79
Maintenance	80
Conditions	80
EMISSION CONTROL SYSTEM	81
On board diagnostics (OBD-II)	82
BRAKE FLUID	84
TRANSMISSION FLUID	84
Checking automatic transmission fluid	84
Low fluid level	85
High fluid level	85
AIR FILTER	86
PART NUMBERS	87
SPECIFICATIONS AND CAPACITIES	89
ENGINE DATA	90