

Normal Schedule

5,000 miles

- ☐ Change engine oil and replace oil filter.
- ☐ Inspect tires for wear.
- ☐ Multi-point inspection (recommended)

10,000 miles

- ☐ Change engine oil and replace oil filter.
- ☐ Inspect tires for wear.
- ☐ Multi-point inspection (recommended)

15,000 miles

- ☐ Change engine oil and replace oil filter.
- ☐ Inspect tires for wear.
- ☐ Inspect automatic transmission fluid level
- ☐ Inspect brake pads/rotors, brake lines & hoses, and parking brake system.
- ☐ Inspect wheel ends for endplay and noise.
- ☐ Inspect engine cooling system and hoses.
- ☐ Inspect steering linkage, suspension and driveshaft and U-joints.
- ☐ Lubricate steering linkage
- ☐ Multi-point inspection (recommended)

20,000 miles

- ☐ Change engine oil and replace oil filter.
- ☐ Inspect tires for wear.
- ☐ Multi-point inspection (recommended)

25,000 miles

- ☐ Change engine oil and replace oil filter.
- ☐ Inspect tires for wear.
- ☐ Multi-point inspection (recommended)

Normal Schedule

30,000 miles

- ☐ Change engine oil and replace oil filter.
- ☐ Inspect tires for wear.
- ☐ Inspect brake pads/rotors, brake lines & hoses, and parking brake system.
- ☐ Inspect wheel ends for endplay and noise.
- ☐ Inspect engine cooling system and hoses.
- ☐ Inspect exhaust system and heat shields.
- ☐ Inspect steering linkage, suspension and driveshaft and U-joints.
- ☐ Replace fuel filter.
- ☐ Replace engine air filter.
- ☐ Inspect automatic transmission. Consult your dealer for your particular requirements.
- ☐ Multi-point inspection (recommended)

35,000 miles

- ☐ Change engine oil and replace oil filter.
- ☐ Inspect tires for wear.
- ☐ Multi-point inspection (recommended)

40,000 miles

- ☐ Change engine oil and replace oil filter.
- ☐ Inspect tires for wear.
- ☐ Multi-point inspection (recommended)

45,000 miles

- ☐ Change engine oil and replace oil filter.
- ☐ Inspect tires for wear.
- ☐ Inspect automatic transmission fluid level
- ☐ Inspect brake pads/rotors, brake lines & hoses, and parking brake system.
- ☐ Inspect wheel ends for endplay and noise.
- ☐ Inspect engine cooling system and hoses.
- ☐ Inspect steering linkage, suspension and driveshaft and U-joints.
- ☐ Lubricate steering linkage
- ☐ Multi-point inspection (recommended)

Normal Schedule

50,000 miles

- ☐ Change engine oil and replace oil filter.
- ☐ Inspect tires for wear.
- ☐ Multi-point inspection (recommended)

55,000 miles

- ☐ Change engine oil and replace oil filter.
- ☐ Inspect tires for wear.
- ☐ Multi-point inspection (recommended)

60,000 miles

- ☐ Change engine oil and replace oil filter.
- ☐ Inspect tires for wear
- ☐ Inspect brake pads/rotors, brake lines & hoses, and parking brake system.
- ☐ Inspect wheel ends for endplay and noise.
- ☐ Inspect engine cooling system and hoses.
- ☐ Inspect exhaust system and heat shields.
- ☐ Inspect steering linkage, suspension and driveshaft and U-joints.
- ☐ Replace fuel filter .
- ☐ Replace engine air filter.
- ☐ Inspect automatic transmission. Consult your dealer for your particular requirements.
- ☐ Multi-point inspection (recommended)

65,000 miles

- ☐ Change engine oil and replace oil filter.
- ☐ Inspect tires for wear
- ☐ Multi-point inspection (recommended)

70,000 miles

- ☐ Change engine oil and replace oil filter.
- ☐ Inspect tires for wear
- ☐ Multi-point inspection (recommended)

Normal Schedule

75,000 miles

- ☐ Change engine oil and replace oil filter.
- ☐ Inspect tires for wear.
- ☐ Inspect automatic transmission fluid level
- ☐ Inspect brake pads/rotors, brake lines & hoses, and parking brake system.
- ☐ Inspect wheel ends for endplay and noise.
- ☐ Inspect engine cooling system and hoses.
- ☐ Inspect steering linkage, suspension and driveshaft and U-joints.
- ☐ Lubricate steering linkage
- ☐ Multi-point inspection (recommended)

80,000 miles

- ☐ Change engine oil and replace oil filter.
- ☐ Inspect tires for wear.
- ☐ Multi-point inspection (recommended)

85,000 miles

- ☐ Change engine oil and replace oil filter.
- ☐ Inspect tires for wear.
- ☐ Multi-point inspection (recommended)

90,000 miles

- ☐ Change engine oil and replace oil filter.
- ☐ Inspect tires for wear.
- ☐ Inspect brake pads/rotors, brake lines & hoses, and parking brake system.
- ☐ Inspect wheel ends for endplay and noise.
- ☐ Inspect engine cooling system and hoses.
- ☐ Inspect exhaust system and heat shields.
- ☐ Inspect steering linkage, suspension and driveshaft and U-joints.
- ☐ Replace fuel filter .
- ☐ Replace engine air filter.
- ☐ Inspect automatic transmission. Consult your dealer for your particular requirements.
- ☐ Multi-point inspection (recommended)

Normal Schedule

95,000 miles

- ☐ Change engine oil and replace oil filter.
- ☐ Inspect tires for wear.
- ☐ Multi-point inspection (recommended)

100,000 miles

- ☐ Change engine oil and replace oil filter.
- ☐ Inspect tires for wear.
- ☐ Inspect accessory drive belt(s).
- ☐ Replace spark plugs.
- ☐ Change Motorcraft Premium Gold Engine Coolant
- ☐ Replace PCV valve
- ☐ Multi-point inspection (recommended)

105,000 miles

- ☐ Change engine oil and replace oil filter.
- ☐ Inspect tires for wear
- ☐ Inspect automatic transmission fluid level
- ☐ Inspect brake pads/rotors, brake lines & hoses, and parking brake system.
- ☐ Inspect wheel ends for endplay and noise.
- ☐ Inspect engine cooling system and hoses.
- ☐ Inspect steering linkage, suspension and driveshaft and U-joints.
- ☐ Lubricate steering linkage
- ☐ Multi-point inspection (recommended)

110,000 miles

- ☐ Change engine oil and replace oil filter.
- ☐ Inspect tires for wear.
- ☐ Multi-point inspection (recommended)

115,000 miles

- ☐ Change engine oil and replace oil filter.
- ☐ Inspect tires for wear.
- ☐ Multi-point inspection (recommended)

Normal Schedule

120,000 miles

- ☐ Change engine oil and replace oil filter.
- ☐ Inspect tires for wear.
- ☐ Inspect brake pads/rotors, brake lines & hoses, and parking brake system.
- ☐ Inspect wheel ends for endplay and noise.
- ☐ Inspect engine cooling system and hoses.
- ☐ Inspect exhaust system and heat shields.
- ☐ Inspect steering linkage, suspension and driveshaft and U-joints.
- ☐ Replace fuel filter .
- ☐ Replace engine air filter.
- ☐ Inspect automatic transmission. Consult your dealer for your particular requirements.
- ☐ Multi-point inspection (recommended)

125,000 miles

- ☐ Change engine oil and replace oil filter.
- ☐ Inspect tires for wear.
- ☐ Multi-point inspection (recommended)

130,000 miles

- ☐ Change engine oil and replace oil filter.
- ☐ Inspect tires for wear.
- ☐ Multi-point inspection (recommended)

135,000 miles

- ☐ Change engine oil and replace oil filter.
- ☐ Inspect tires for wear.
- ☐ Inspect automatic transmission fluid level
- ☐ Inspect brake pads/rotors, brake lines & hoses, and parking brake system.
- ☐ Inspect wheel ends for endplay and noise.
- ☐ Inspect engine cooling system and hoses.
- ☐ Inspect steering linkage, suspension and driveshaft and U-joints.
- ☐ Lubricate steering linkage
- ☐ Multi-point inspection (recommended)

Normal Schedule

140,000 miles

- ☐ Change engine oil and replace oil filter.
- ☐ Inspect tires for wear.
- ☐ Multi-point inspection (recommended)

145,000 miles

- ☐ Change engine oil and replace oil filter.
- ☐ Inspect tires for wear.
- ☐ Multi-point inspection (recommended)

150,000 miles

- ☐ Change engine oil and replace oil filter.
- ☐ Inspect tires for wear.
- ☐ Inspect automatic transmission fluid level
- ☐ Inspect brake pads/rotors, brake lines & hoses, and parking brake system.
- ☐ Inspect wheel ends for endplay and noise.
- ☐ Inspect steering linkage, suspension and driveshaft and U-joints.
- ☐ Lubricate steering linkage
- ☐ Inspect engine cooling system and hoses.
- ☐ Change Motorcraft Premium Gold Engine Coolant
- ☐ Inspect exhaust system and heat shields.
- ☐ Replace fuel filter
- ☐ Replace engine air filter
- ☐ Change automatic transmission fluid.
- ☐ Change rear axle lubricant.
- ☐ Replace accessory drive belt(s) (if not replaced within last 100,000 miles).
- ☐ Multi-point inspection (recommended)

Special Conditions

Items Needing Special Attention

If you operate your STALLION **primarily** in one of the more demanding "**Special Operating Conditions**" listed below, you will need to have some items maintained more frequently. If you only **occasionally** operate your vehicle under these conditions, it is not necessary to perform the additional maintenance. For specific recommendations, see your dealership service advisor or qualified service professional.

Towing a trailer:

- **Every 3,000 miles or 3 months** Change engine oil and replace oil filter
- **Every 30,000 miles** Change automatic transmission fluid
- **As required** Inspect and lubricate U-joints

Extensive idling and/or low-speed driving for long distances as in heavy commercial use such as delivery:

- **Every 3,000 miles, 3 months or 200 hours of engine operation**
Change engine oil and replace oil filter
- **Every 3,000 miles or 3 months** Lube steering linkage
- **Every 5,000 miles** Inspect brake system
- **Every 15,000 miles** Replace fuel filter
- **Every 30,000 miles** Change automatic transmission fluid, Lubricate front wheel bearings, replace grease seals, and adjust bearings
- **Every 60,000 miles** Replace spark plugs.

Operating in dusty conditions such as unpaved or dusty roads:

- **Every 3,000 miles or 3 months** Change engine oil and replace oil filter
- **Every 15,000 miles** Replace fuel filter
- **Every 30,000 miles** Change automatic transmission fluid, replace air filter as required
- **Every 50,000 miles** Change rear axle lubricant
- **As required** Replace engine air filter

Exceptions

In addition, there are several exceptions to the Normal Schedule. They are listed below:

Maximim Oil Change Interval

- ☐ Normal Schedule: 5,000 miles or 6 months, whichever occurs first.
- ☐ Special Operating Conditions: 3,000 miles, 3 months, or 200 hours of engine operation, whichever occurs first .

Motorcraft Premium Gold Engine Coolant

- ☐ 6 years or 100,000 miles - change Premium Gold coolant (whichever comes first)
- ☐ After initial change - change Premium Gold coolant every 3 years or 50,000 miles

Normal Vehicle Axle Maintenance

- ☐ The axle lubricant should be changed anytime an axle has been submerged in water.

California Fuel Filter Replacement

- ☐ If vehicle is registered in California, the California Air Resources Board has determined that the failure to perform this maintenance item will not nullify the emission warranty or limit recall liability prior to the completion of the vehicle's useful life. We, however, urge that all recommended maintenance services be performed at the indicated intervals and the maintenance be recorded.

