

Fuel Tank Removal Procedure

Please Read Procedure from Start to Finish Before Beginning Repair

1. Remove driver back rest and seat base.
2. Remove passenger backrest
 - a. Remove two ¼” nuts
 - b. Pull down on backrest and remove from vehicle



3. Remove Left Side Wheel Assembly
 - a. Remove hub cap
 - b. Loosen lug nuts
 - c. Jack up and block left rear of vehicle
 - d. Remove lug nuts and Wheel

