

4. Relieve Fuel Pressure in Lines

- a. Lift Hood.
- b. Locate fuel rail pressure relief valve (left side of vehicle under engine coolant degas bottle)
- c. Remove dust cap.
- d. Press valve with pen to relieve pressure in line.
- e. Replace cap.



5. Drain Fuel Lines

- a. Remove supply fuel line from filter
(Located under battery bracket in left rear wheel well)
- b. Push colored button on supply fuel line to release connector from filter.
- c. Drain gas from line into drain pan.
- d. Re-connect fuel supply line after fuel has stopped draining.

