

9. Disconnect Fuel Lines and Electrical Connectors to Pump
  - a. Reach in under left wheel well to top of fuel sending unit
  - b. Disconnect electrical plug by pushing RED safety tab to rear of vehicle. Push down on locking tab and pull plug off.
  - c. Use screw driver to push colored tabs on all quick release fittings from fuel lines to fuel sending units (4 total shown below in pictures)

